


**Instructions for use:**

Through floor (see # 3 & 4 if through wall)

- Place the card flat on the floor with top edge to the wall at the proposed start of the run (next to door architrave for example) A: Clockwise Direction B: Anti-Clockwise
- Drill 2 x 18mm holes as shown, tight to wall
- Stand card up at start of run (allowing for final floor finish if not fitted; i.e. 20mm for carpet and underlay, 10mm for laminate or tiles)
- Mark edges of shaded area (and centres of pipe holes if through wall install; C: Clockwise D: Anti-clockwise - Ø30mm).
- Relieve shaded area to a depth of 5mm to allow clearance for push fit fittings.
- Install pipes (and leave long & capped off if pending installation of fittings)

Need Help? See video link or at [discreteheat.com](http://discreteheat.com) or Google; *ThermaSkirt Pro Guide 1*

**A. LH END Clockwise Installation**

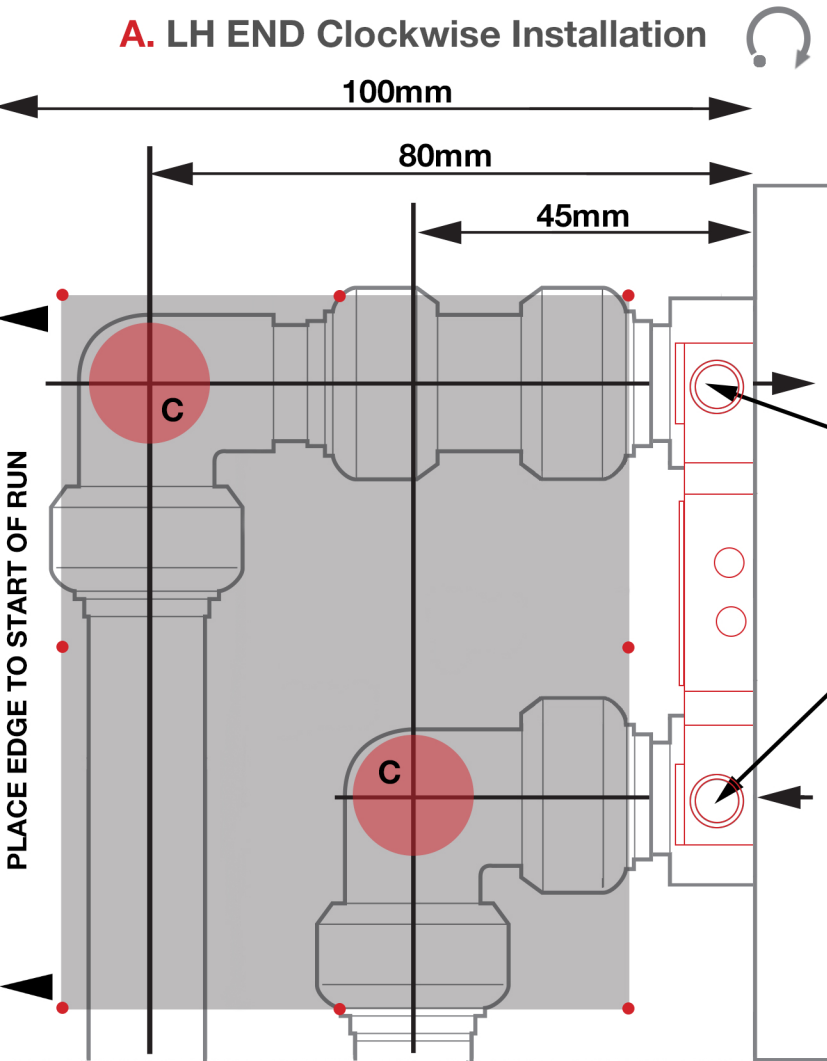

Retaining Clip & Pegs to the **FRONT**

Relieve plaster/surface finish to a depth of 5mm in this shaded area to allow for Tectite fittings (minimum 95mm x 75mm)

**B. RH END Anti-clockwise Installation**

