


SINGLE TRV INSTALLATION TEMPLATE: DECO BM

(Through floor/wall 1st Fix pipework)

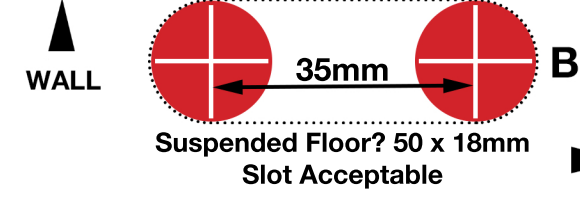


Instructions for use:

Through floor (see # 3 & 4 if through wall)

1. Place the card flat on the floor with top edge to the wall at the proposed start of the run (next to door architrave for example) A: Clockwise Direction B: Anti-Clockwise
2. Drill 2 x 18mm holes as shown, tight to wall
3. Stand card up at start of run (allowing for final floor finish if not fitted; i.e. 20mm for carpet and underlay, 10mm for laminate or tiles)

4. Mark edges of shaded area (and centres of pipe holes if through wall install; C: Clockwise D: Anti-clockwise).
 5. Relieve shaded area to a depth of 5mm to allow clearance for push fit fittings.
 6. Install pipes (and leave long & capped off if pending installation of valves and fittings)
- Need Help? See video at discreteheat.com or Google; *ThermaSkirt Pro Guide 1*

A. LH END Clockwise Installation

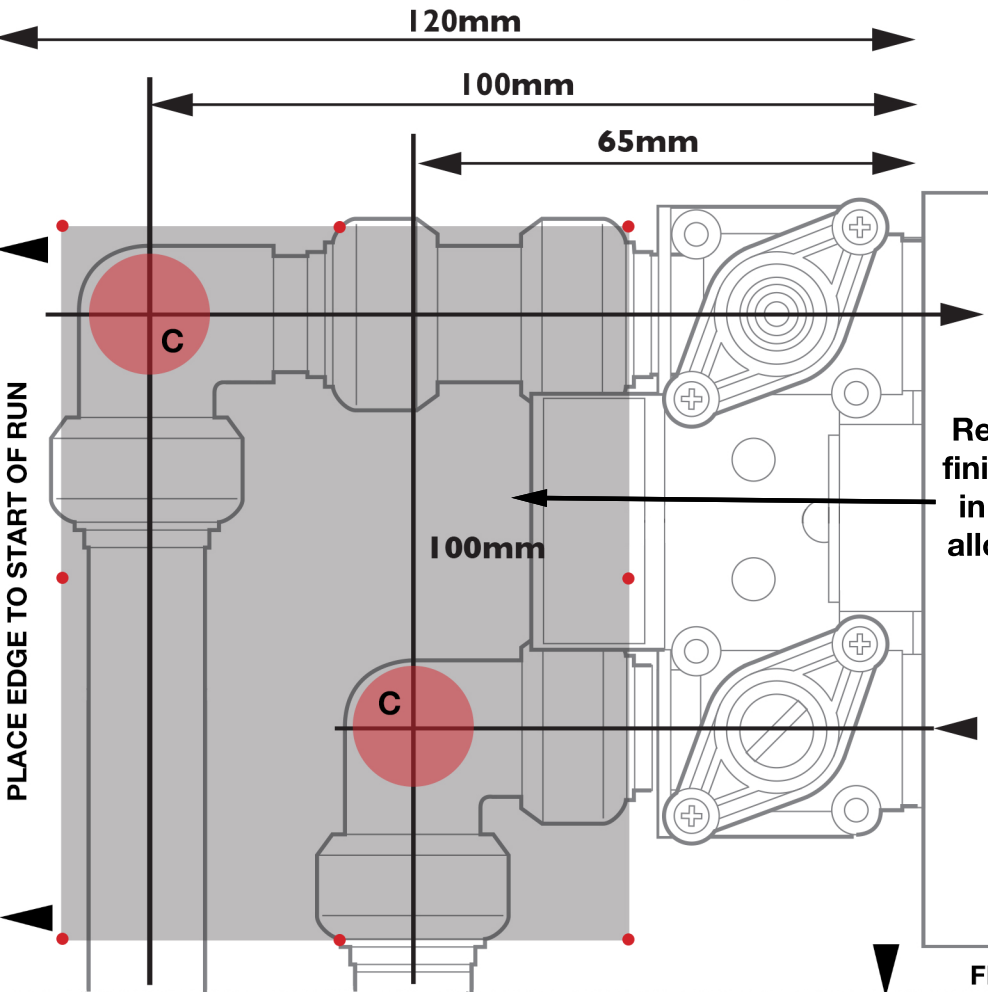

B. RH END Anti-clockwise Installation

