


**USE IN CONJUNCTION WITH YOUR MAIN THERMASKIRT® INSTALLATION INSTRUCTIONS**

**IMPORTANT:** Unless the ThermaSkirt® has been supplied factory cut, it is **ESSENTIAL** that the skirting is deburred. 5 revolutions of the ThermaSkirt® de-burrer or similar de-burring tool is recommended. A 'Bell Mouth' chamfer of (approx.) 2mm x 2mm is best to enable ease of installation of connectors. Any swarf or chippings **MUST** be removed before inserting any fittings into the skirting's feed and return channels. Otherwise your **WARRANTY MAY BE INVALID!** (See main installation instructions for full details. To download, go to [www.discreteheat.co.uk/technical.data.html](http://www.discreteheat.co.uk/technical.data.html)).

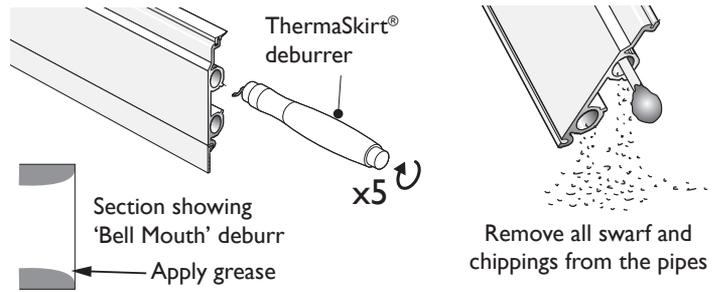

**THRESHOLD KIT**



The threshold kit is used to join two sections of ThermaSkirt® when crossing a doorway, arch or fireplace, etc. Ensure that feed and return pipes are installed correctly (obtain a template from [www.discreteheat.co.uk/technical.data.html](http://www.discreteheat.co.uk/technical.data.html)) making sure you allow for carpets or tiles if not Finished Floor Level (FFL).

Your pipework (not supplied), connecting the two ends of skirting, can either go below suspended timber beams or can be channelled into the beams or hard floor (**A**). The channel must be at least 50mm deep x 50mm wide and it is most important that **NO** drilling or fittings, such as carpet grippers be used in this area.

Remove 100mm of skirting on each side of the threshold to allow for fittings and covers. Fit a connector clip to each end of the skirting, making sure that it will engage with the straight connectors at the front (**B**). Slide the two ends of skirting over the two straight connectors, ensuring the lugs engage correctly at the front (**C**).

**USE THE SILICON GREASE PROVIDED!**

Finish by fitting a left and right hand threshold cover by hooking the cover over the top of the skirting, then pushing the bottom inwards until it clicks. (**D**).

**TOP TIP:** When installing into a doorway or conservatory entrance, use a 'dry section' of ThermaSkirt® in the short length of wall to complete the look (**E**). For this arrangement you will need an alternative cover (**F**). Special Threshold covers may be required. Download a template from: [www.discreteheat.co.uk/technical.data.html](http://www.discreteheat.co.uk/technical.data.html)

